 


-Animal Will Not Let Milk Down- Place the animal in a calm environment. Give her food.
 -Loud noise will make the animal skittish and she will close off her milking production.
 -The animal must get used to the milker.
 -Milk her by hand, then milk her with the milk machine and so on. This will let her know that milking with the machine and hand milking are the same.
 -Start off by milking only one teat cup at first. It is easier for the animal and you until you both get used to the milker.
 -Milk at the same time every time you milk. Let the animal see the kid (but not get to Mom).
 -Our Dansha Farms™ Milkers are quality control tested. Contact me at 850-464-2881 so I can help. Be sure to leave me a message if I don't answer. We will call you back.

- **Avoid Temperature Extremes-** Temperatures above 95 degrees and below 35 degrees Fahrenheit. Keep the milker out of direct sunlight.




- **Animal Kicks & Bucks-** Take a front left or right leg and bend it up at the knee, then tie so she is on three legs that will stop her from kicking and bucking. **You can do this only to smaller animals like goats and sheep.**

- **Cannot Strip Her Out (Remove All Her Milk) -** Gently pull down on the teat cup(s). That should remove most of the milk. It is not advisable to remove all the milk from her by hand (refer to milking recommendations).

- **Blood in the Milk-** This could be from Mastitis or too much vacuum. You should only apply enough vacuum to see milk flow. If you see the teat pulling way down into the teat cup, stop and relieve the vacuum, there is something wrong.
 ☑ Please watch our demonstration videos on www.danshafarms.com Please feel free to contact me.

- ☑ I will do everything I can to help you keep milking your animals. If a part breaks or wears out, please contact me. I will do my best to fix and repair for you at little cost.

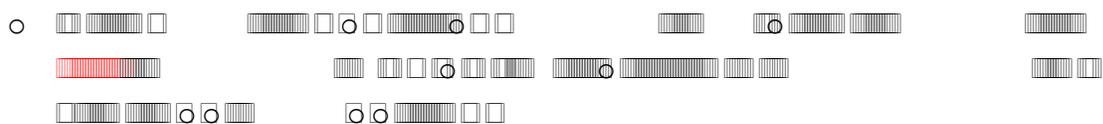

Thank you and happy milking,

Dansha Farms™
 6676 SE County Road 255 Lee, Florida 32059 850.464.2881
info@danshafarms.com